


Mini Control Board - Sboard

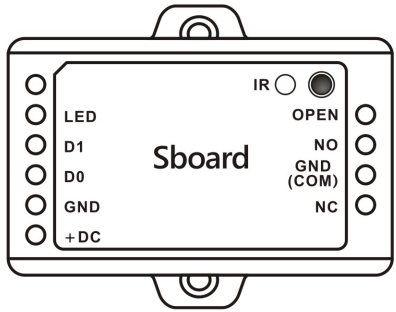

User Manual

INTRODUCTION

The Sboard is a mini single door control panel, can work with any Wiegand 26~37 bits output reader. It uses Atmel microcontroller to assure stable performance, and equips with an infrared remote control for easy operation. The Sboard supports 1,000 users, all user data can be transferred.

Features


- > 1,000 users, user data can be transferred
- > Multi access modes: Card, Card or PIN, Card with PIN and multi Cards/PINs
- > Can connect with any reader with Wiegand 26~37 bits output
- > Can connect with any keypad reader with 4bits, 8bits (ASCII), or 10bits Virtual number output
- > Support Master Card function
- > Low temperature resistance(-40°C)

Specifications

User Capacity	1,000
Operating Voltage	12V DC
Idle Current	<20mA
Relay	One (NO, NC, Common)
Adjustable Relay Output Time	1~99 Seconds (5 seconds default)
Lock Output Load	2 Amp Maximum
Wiegand Interface	Wiegand 26~37 bits
Input	Wiegand 26~37 bits (for user transfer)
Output	
Environment	Meets IP66
Operating Temperature	-40°C ~ 60°C (-40°F ~ 140°F)
Operating Humidity	0~90%RH
Physical	ABS Shell
Colour	Black (White optional)
Dimensions	L65mm × W54mm × D19mm
Unit Weight	40g
Shipping Weight	100g

- 01 -


Carton Inventory

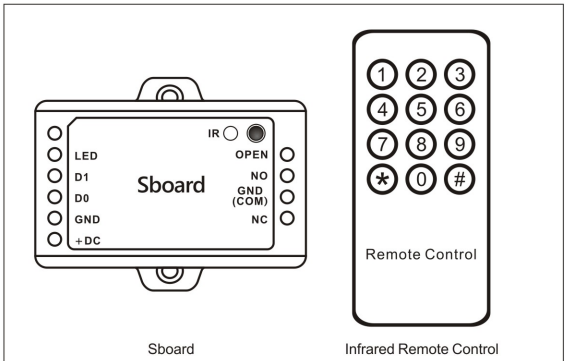

- Diode 1N4004 (For relay circuit protection)
- Self Tapping Screws: Φ3*25mm
- Wall Anchors
- Screw Driver

- 02 -

INSTALLATION

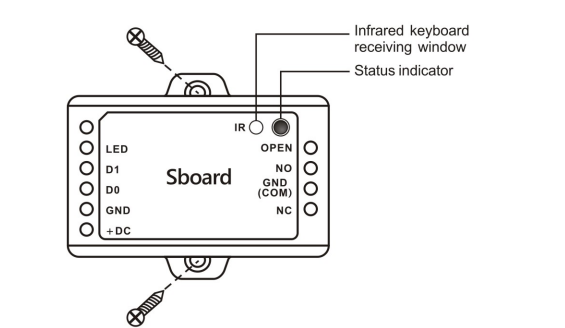

Wiring

Name	Notes
The Left Side	
LED	Green LED Light Control
D1	Wiegand Input Data 1
D0	Wiegand Input Data 0
GND	Negative Pole of DC (9~24V) Power Input
+DC	Positive Pole of DC (9~24V) Power Input
The Right Side	
OPEN	Connect to One Wire of Exit Button
NO	Normally Open Relay Output (install diode provided)
GND (COM)	Negative Pole of Lock (Common Connection for Relay Output)
NC	Normally Closed Relay Output (Install diode provided)


- 03 -

Sound and Light Indication

Operation Status	LED	Buzzer
Stand by	Red light bright	—
Enter into programming mode	Red light shines	One beep
In the programming mode	Orange light bright	One beep
Operation error	—	Three beeps
Exit from the programming mode	Red light bright	One beep
Open lock	Green light bright	One beep


Connection Diagram

Magnetic Lock or Fail-safe Lock

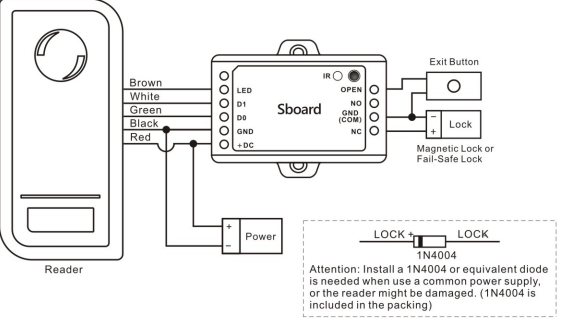


- 04 -

Door/Gate Operator or Fail-secure Lock

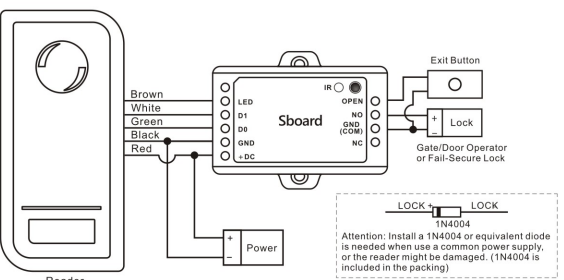

When Use NO/NC/COM Dry Contact Output

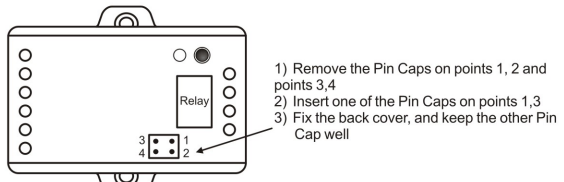

Remark:
The power supply's voltage must be the same with lock's supply voltage, or else, the lock will not work properly or be damaged.

- 05 -

Reset to Factory Default and Master Cards Programming
To reset to factory default, power off, press the Exit Button (or connect "OPEN" and "GND" to be short circuit), hold it and power on, there will be two beeps, and the LED light turns into orange, release the exit button (or disconnect "OPEN" and "GND"), then read any two cards on the external reader, the LED will turn into red, means reset to factory default successfully. Of the two cards reading, the 1st one is Master Add Card, the 2nd one is the Master Delete Card.

Remarks:

- ① The Master Cards are not included in the standard packing. The type of the Master Cards is according to the external reader. For example: the external reader is 125KHz HID Reader, then the Master Cards must be 125KHz HID cards.
- ② If no Master Cards added, must press the Exit Button for at least 10 seconds before release.
- ③ Reset to factory default, the user's information is still retained.

PROGRAMMING

Programming will vary depending on access configuration. Follow the instructions according to your access configuration.

Notes:

- **Remote Control:** Please use the Infrared Remote Control to program the Sboard. The "IR" on the Sboard is the infrared receiving window, please direct the Remote Control to it.
- **User ID number:** Assign a user ID to the access card in order to track it. The common user ID number can be any number from 0~999. IMPORTANT: User IDs do not have to be proceeded with any leading zeros. Recording of User ID is critical. Modifications to the user require the User ID be available.
- **PIN:** Can be any 4~6 digits except 8888 which is reserved.

Enter and Exit Program mode

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) # (Factory default is 123456)
2. Exit Program Mode	*

- 06 -

Set Master Code

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Update Master Code	0 (New Master Code) # (Repeat New Master Code) # (code: 6 digits)
3. Exit Program Mode	*

Add Users with Remote Control

Sboard Connected with Card Reader:
For the readers develop together with Sboard, such as S series readers, skip the below step 1; For other card readers, set the Sboard's Wiegand input as below step 1 according to the Wiegand output of the readers.

Sboard Connected with Keypad Reader:
Can be any Keypad Reader with 4Bits, 8Bits (ASCII), 10Bits output format
Set the Sboard as below step 1 according to the Wiegand output and PIN output format of the Keypad Reader.

PIN(s) can be input/added on either the remote control or the external Keypad Reader, except when the Keypad Reader is 10 digits virtual card number output, the PIN(s) can only be input/added through the Keypad Reader.

Step 1

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Wiegand Input bits	8 (26~37) # (Factory default is 26bits)
PIN Input bits	8 (4 or 8 or 10) # (Factory default is 4bits)
3. Exit	*

Remarks: 4 means 4 bits, 8 means 8 bits, 10 means 10 digits virtual number.

- 07 -

Step 2

Programming Step	Keystroke Combination
Add Card User	
1. Enter Program Mode	* (Master Code) #
2. Add Card: Using Auto ID (Allows Sboard to assign Card to next available User ID number)	1 (Read Card on External Reader) #
OR	1 (User ID) # (Read Card on External Reader) #
2. Add Card: Select Specific ID (Allows Master to define a specific User ID to associate the card to)	1 (User ID) # (Read Card on External Reader) #
OR	1 (Input 8/10 digits Card number) #
2. Add Card: by Card Number	1 (User ID number) # (Card quantity) #
OR	1 (User ID number) # (Card quantity) #
2. Add Card: Block Learn (Allows Master to add up to 1000 cards to the Reader in a single step.) Takes 2 minutes to program.	1 (User ID number) # (Card quantity) #

Programming Step	Keystroke Combination
Add PIN User	
1. Enter Program Mode	* (Master Code) #
2. Add PIN: Using Auto ID (Allows Sboard to assign PIN to next available User ID number)	1 (Input PIN) #
OR	1 (User ID) # (Input PIN) #
2. Add PIN: Select Specific ID (Allows Master to define a specific User ID to associate the card to)	1 (User ID) # (Input PIN) #
OR	1 (User ID) # (Input PIN) #
3. Exit	*

Sboard Connected with Fingerprint Reader:

For example:
Connect F1 as the fingerprint reader to Sboard, two steps to enroll the valid fingerprint.
(1) Add the Fingerprint (A) on F1
(2) Add the same Fingerprint(A) on Sboard as below:

- 08 -

1	Enter Program Mode: * (Master Code) #
2	1 (Press Fingerprint A on F1) (Repeat Fingerprint A on F1) #
OR	1 (User ID) # (Press Fingerprint A on F1) (Repeat Fingerprint A on F1) #
2	2 (Select specific ID)
3	Exit: *

Add Users by Master Add Card

Add card users
[Master Add Card] - [Read User Card] - [Master Add Card] (Cards can be added continuously)

Add PIN users
[Master Add Card] - [Input PIN] - [Master Add Card] (PINs can be added continuously)

Change PIN

Programming Step	Keystroke Combination
Note: Below is done outside programming mode, users can undertake this themselves	
1. Change the card associated PIN (There will auto associate PIN (8888) to cards when adding card users)	* (Read Card) (Old PIN) # (New PIN) #
	(Repeat New PIN) #
	(PIN: 4~6 digits)
1. Change the users' PIN	* (ID Number) # (Old PIN) # (New PIN) #
	(Repeat New PIN) #
	(PIN: 4~6 digits)
2. Exit	*

Delete User Card(s) or PIN(s) by Remote Control

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #

2. Delete User - By User ID	2 (User ID) #
OR	2 (Read Card on External Reader) #
2. Delete User - By Card	2 (Input 8/10 digits Card number) #
OR	2 (Input PIN) #
2. Delete User - By PIN	2 (Mater Code) #
OR	*
2. Delete All User	*
3. Exit	*

Delete Users by Master Delete Card

Delete card users
[Master Delete Card] - [Read Card] - [Master Delete Card] (Cards can be deleted continuously)

Delete PIN users
[Master Delete Card] - [Input PIN] - [Master Delete Card] (PINs can be deleted continuously)

Set Relay Configuration

The relay configuration sets the behaviour of the output relay on activation.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Pulse Mode	3 (1~99) #
	The relay time is 1~99 seconds. (1 is 50mS)
	(Factory default is 5 seconds)
OR	
2. Toggle Mode	3 0 #
	Sets the relay to ON/OFF Toggle mode
3. Exit	*

- 09 -

Set Access Mode

For Multi Cards/PINs access mode, the interval time of pressing cards/inputting PINs can not exceed 5S, or else, the machine will exit to standby automatically.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Card access	4 0 #
OR	4 1 #
2. Card + PIN access	4 2 # (Factory default)
OR	4 3 (2~9) #
2. Multi cards/PINs access	*
3. Exit	*


Set Audible and Visual Response

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Control Sounds	OFF = 7 0 #
OR	ON = 7 1 #
2. Control LED	OFF = 7 4 #
	ON = 7 5 #
	(Factory defaults are ON)
3. Exit	*

User Information Transfer

The Sboard supports the User Information Transfer function, and the enrolled user (cards, PINs) can be transferred from one (let's name it Master Unit) to another (let's name it Accept Unit). Maximum 10pcs Accepts Units can be transferred once.

Connection Diagram:

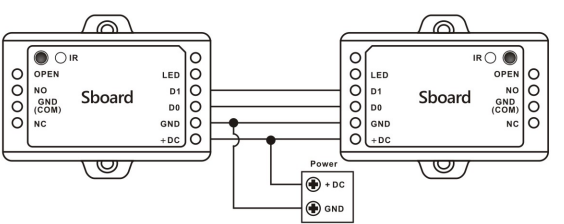

Remarks:

- The Master Units and Accept Units must be Sboard or S1234-X.
- The Master Code of the Master Unit and the Accept Unit(s) must be set to the same.
- Program the transfer operation on Master Unit only.
- If the Accept Unit(s) are already with the users enrolled, it will be covered after transfer.
- For full 1,000 users enrolled, the transfer takes 3 minutes.

Set Transferring on Master Unit:

Programming Step	Keystroke Combination
1. Enter the programming mode	* (Master Code) #
2. Set transferring	9 6 #
Within 3 minutes, Green LED shines, that means the users' information has been transferred successfully.	
3. Exit	*

- 12 -