

1、Specification

1.1 Power vol: DC9~14V

2. Operation

Press *+8888+#, enter the program mode, 8888 is the default program password, you can change this if necessary by below:

Press: 6 0+#+4~8 digits new password+#+repeat the 4~8 digits new password+#; Press * * to exit the program mode.

Register new card and delete card:

- 1)、The methods to add new card: a、add card quickly; b、input the card number, Details as below:
Method a: press 2 0 + # + swipe card, notes: You can swipe multiple cards by sequence, If stopped for more than 10 seconds, will exit the mode automatically.
Method b: Press 1 0 + # + 8 digits card number + #, Notes: please use the back 8 digits number which is printed on card.
- 2)、The methods to delete card: a、delete by swipe card;b、delete by card number
Method a: press 3 0 + # + swipe card,notes: You can swipe multiple cards by sequence to delet, If stopped for more than 10 seconds, will exit the mode automatically.
Method b: Press 3 1 + # + 8 digits card number + #, Notes: please use the back 8 digits number which is printed on card.

1、Add door open password

Press 1 1 + # + 4~8 digits door open password + #; Notes: the password is 4-8 digits number, the maximum capacity is 100 passwords. If add the 2nd password, Please input again 1 1+#+4~8 digits.

Notes:If open door by password, must input password then press #

- 2、Delete door open password: Method a: Delete single password; b、Delete all passwords.
Delete single password: Press 3 5 + # + 4-8 digits password + # ; Notes: This will delete the related password of door opening.

Delete all passwords: Press 3 6 + # Notes: This will delete all passwords
- 3、Swipe card + password to open door: Press 2 4 + # + swipe card + Input 4-8 digits password + #; Notes: After program command input, then swipe card, then input password.
- 4、Enable auto register: Press 8 6 + # ; Notes: After this feature enabled, can open door by swiping any card, if this card is not registered, it will be registered at the same time automatically.
- 5、Enable auto open: Press 8 5 + # ; Notes: After the feature enabled, can open door by any card.
- 6、Diable Auto open: Press 8 7 + #.
- 7、Change the door open delay time: Press 6 6 + # + 3 digits time length + #; notes: the max time is 255 seconds, default time is 3 seconds.
- 10、restore the factory setting: Press 7 0 + #, Notes: All cards and passwords will be deleted. To restore the management password: 1234.
- 11、Reset hardware: Press the reset key (REST), Press 5 times and then press # key to restore the management password. The card and password info is not deleted; If press 10 times and then press # key, all card and password will be deleted.
- 12、LED indicator: The red flashing means working well, enter the program mode, the red led stop flashing., waiting for command. Green LED means the door confirmed to open.